


Baofeng Crossband Repeater Interface

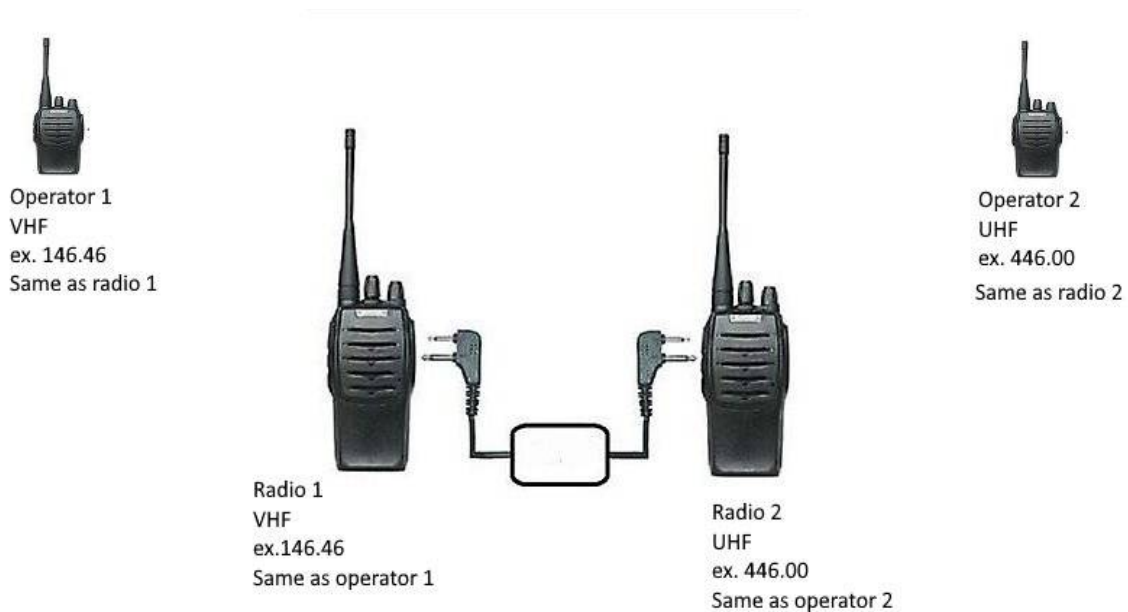

Setup is as easy as the picture shows. Plug the cable into each radio. Tune one radio to desired VHF frequency and the other to the desired UHF frequency. The radios at each operators end will need to be set on the appropriate frequency as well. (ex. Operator 1 will be set to the VHF frequency of radio 1 and operator 2 will be set to the UHF frequency of radio 2. Or vice versa)

****Tips****

- If the radios have dual VFO receive, turn off the option to avoid interference
- If using the rubber duck antenna on the radios, separate the radio as much as possible to avoid interference
- If the repeater radios lock on TX, then most likely there is not enough separation and the repeater radios are interfering with each other
- The volume of the repeater radios must be set to the desired level. Meaning, if the repeater radio volume is turned down, no audio will pass. The volume of each repeater radio sets the volume of the transmission.